


PACKAGE CONTENTS

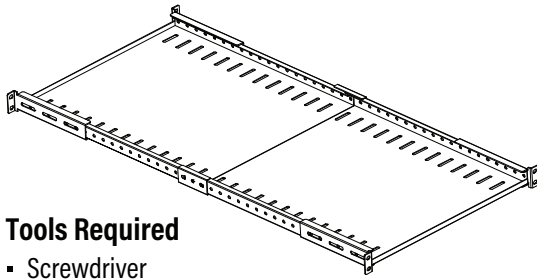


Tools Required

- Screwdriver
- Wrench
- Cage Nut Tool (recommended)


Note: Ships pre-assembled at 505 mm (19.88") depth.

For Depth Adjusting

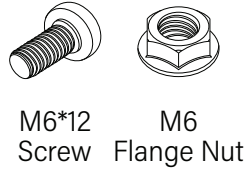

12 sets
(8 pre-assembled)


For Rack Mounting

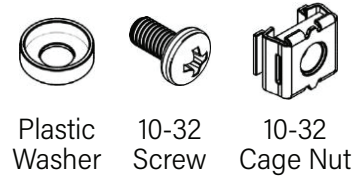

8 sets

INSTALLATION


1

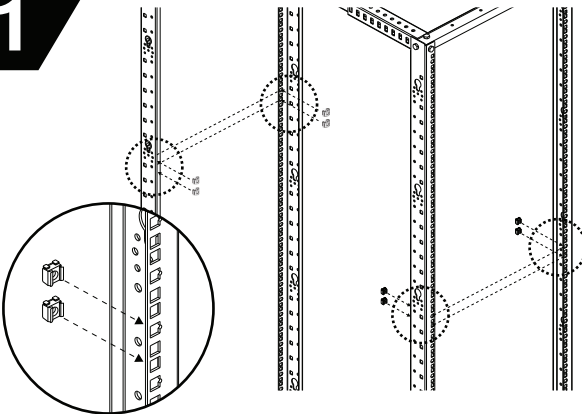

Prepare the rack

Select the desired U(rack unit) position. On both the front and rear vertical mounting rails, insert 10-32 cage nuts from the rear side and snap them into place at the matching U holes.


2

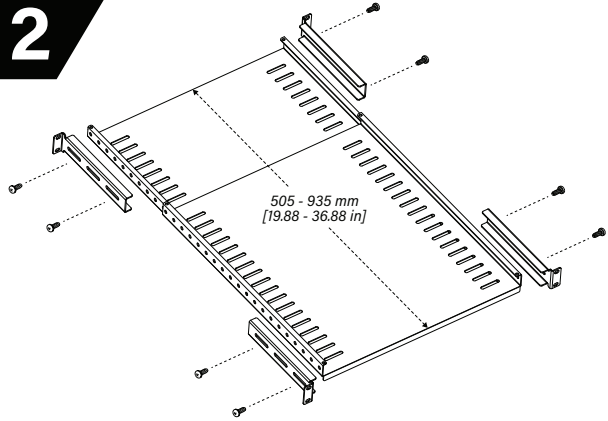

Set the shelf depth

Loosen the M6 hardware on the front-to-back ears, slide to the required depth between 505 and 935 mm (19.88 to 36.88 in), align with the vertical rails, then lightly tighten the M6 screws to hold the setting.


3

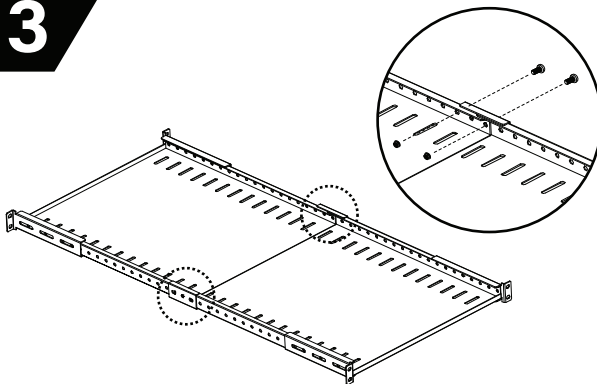

Install the center supports

Attach the two center support bars using M6 screws and flange nuts. Tighten them enough to secure the bars, but leave final torque for the end.

4

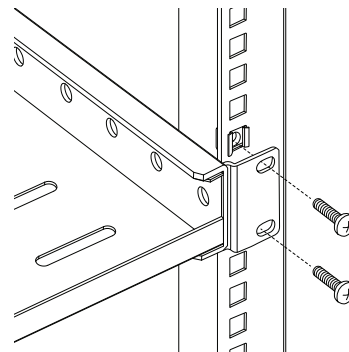

Mount and tighten

With the shelf sides and the bracket facing up, hook the brackets over the rails, then loosely the front 10-32 screws (bottom hole first, then top) and screws into the cage nuts. Once level, tighten all screws without overtightening.